

UTS V Codes:

Green LED:

1.5 Second flash every 3 seconds (slow). = Ignition Off

1 Flash every 1 second (fast) = Ignition On

Red LED:

The red LED flashes a number between 1 and 9 to indicate problems with the device or installation. If the red LED isn't flashing then there are no problems detected by the unit.

The number repeats every 3-8 seconds, and is updated every 8-15 sec.

1: No Sim Detected

2: No Cellular Signal

3: No GPS Signal

4: No Cellular & No GPS Signal

5: No Sim & No GPS Signal

6: Contact UTS

7: Contact UTS

8: GPS OK – No Network REG. Contact UTS

9: No GPS Fix

UTS VP, XL & X LED Codes:

Green LED

Solid for 30 sec. = Device Power up

25 times on-off per 10 seconds when ignition is ON

8 times on-off per 10 seconds when ignition is OFF

Very short blip per 3 seconds when in Sleep Mode

Red LED:

1-1, 1-2, 1-3 contact UTS

2-1 contact UTS

2-2 No Sim

2-3 No Cellular Signal

2-4 Network Not Found

2-5 Last Data Session Failed

2-6 GPRS is not Attached

3-1 Contact UTS

3-2 GPS Antenna Fault

3-3 GPS not tracking any Satellites

3-4 No GPS No Fix

3-5 GPS has no Time

4-2 Data Transfer Failed